


STAY-FORM

The Stay-in-Place Concrete Form

FLOOD WALL USING STAY-FORM WITH EXPANDED METAL GRATING REINFORCEMENT

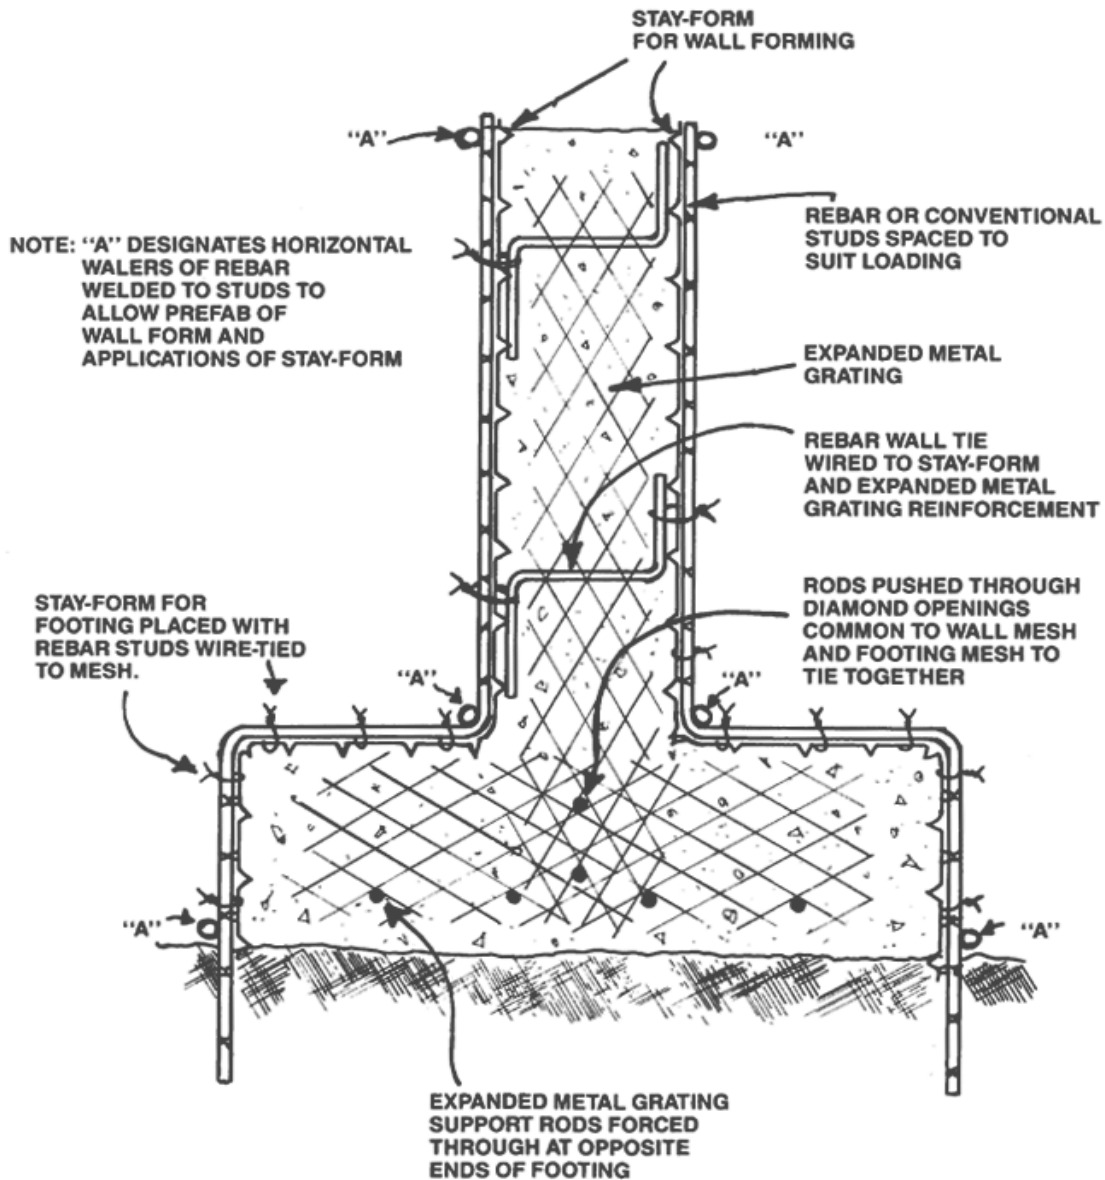

NOTE: See load table on page 3 for spacing and load information.
It is preferable to orientate ribs into first pour.

TECHNICAL SUPPORT
800/366-2642 ext. 205
FAX 205/786-6527



Page 10

SALES DEPARTMENT
800/366-2642